

## US UK

### Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty.

1

### OS support

Windows XP/Vista/Win7/Win8/Win10

### Product Feature

Ultra-thin design  
N-Keys rollover  
High-performance gaming switches

### Backlighting Modes

FN+INS, switch 3 backlighting modes: 1. The trial of Light 2. Breathing 3. Normally on  
FN+HOME, switch 3 backlighting modes: 1. Ripple Graff 2. Pass without Trace 3. Coastal  
FN+PGUP, switch 3 backlighting modes: 1. Hurricane 2. Accumulate 3. Digital Times  
FN+DEL, switch 3 backlighting modes: 1. Go with the stream 2. Clouds fly 3. Winding Paths  
FN+END, switch 3 backlighting modes: 1. Flowers blooming 2. Snow winter jasmine  
3. Swift action  
FN+PGDN, switch 3 backlighting modes: 1. Both ways 2. Surmount 3. Fast and the furious

2

### Keyboard function

FN+WIN, Lock Windows and APP function, repeat to unlock.  
FN+[ ] [ ] 4 Level running speed adjustable  
FN+[←] Adjust the backlight running direction  
FN+[→] Adjust the backlighting color, colors switching by circle  
FN+[↑] [↓] 4 Level brightness adjustable  
FN+[PRTSC] To restore default as flow mode

### Multi-media keys

FN+[F1] Open the media player  
FN+[F2] Volume down  
FN+[F3] Volume up  
FN+[F4] Mute  
FN+[F5] Stop  
FN+[F6] Pre-track  
FN+[F7] Play/ Pause  
FN+[F8] Next track  
FN+[F9] E-mail  
FN+[F10] Home  
FN+[F11] Calculator  
FN+[F12] Search

3

### FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



4



REDRAGON

APAS  
Mechanical Gaming Keyboard

Mechanical Gaming Keyboard Operating Instructions