



AKKO

5075 (RGB)

 
用户手册
User Manual

目录

组合键功能	1
系统功能(Windows)	2
系统功能(Mac)	3
背光调节	4
按键 / 灯光自定义说明和调用说明	5
Akko售后服务规范	6

■ Menu



HotKeys	7
System Commands (Windows)	8
System Commands (Mac)	9
Backlight Settings	10
Key/Lighting Effects Customization Instruction	11
Akko Warranty and Service Statement	12

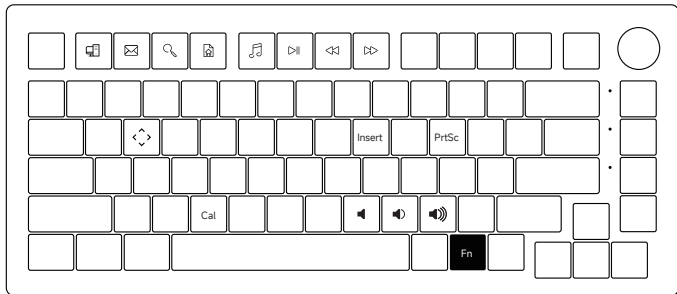

Fn+	F1	=	我的电脑
	F2		电子邮件
	F3		Windows搜索
	F4		浏览器主页
	F5		多媒体播放器

Fn+	F6	=	播放 / 暂停
	F7		上一首
	F8		下一首
	I		Insert
	P		PrtSc

Fn+	C	=	计算器
	M		静音
	<		音量减小
	>		音量增加
	W		将W A S D 与↑↓←→键对调

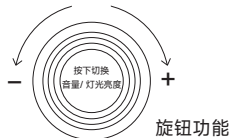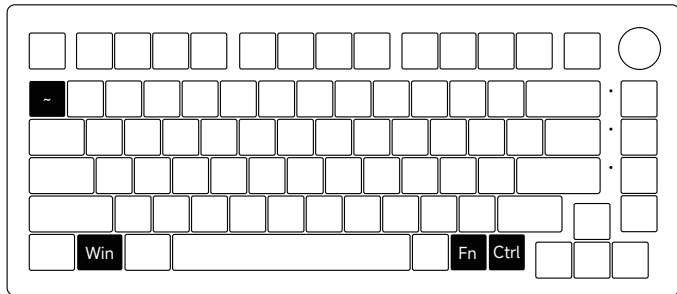  

背面开关示意

左: Windows
中: 默认Windows
右: Mac

锁Win键

 
Fn + 左Win

恢复出厂设置

长按 Fn + ~ 5秒

将Ctrl变成Menu (App) 键

长按Fn + 右Ctrl 3秒

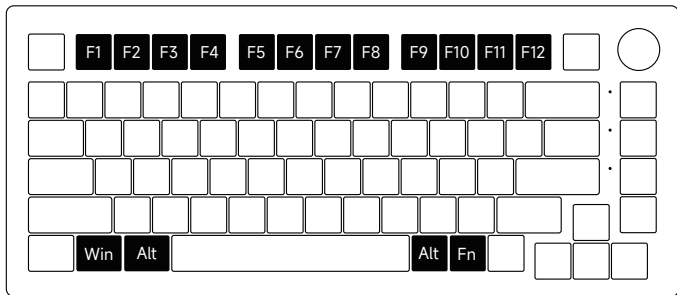

F1 降低显示屏亮度

F2 增加显示屏亮度

F3 开放任务控制

F4 呼出Siri

F7 向后跳(音频)

F8 暂停/播放(音频)

F9 向前跳过(音频)

F10 静音

F11 调低音量

F12 调高音量

 
左Win Option

左Alt Command

右Alt Command

Fn + (F1 ~ F12)

F1 ~ F12

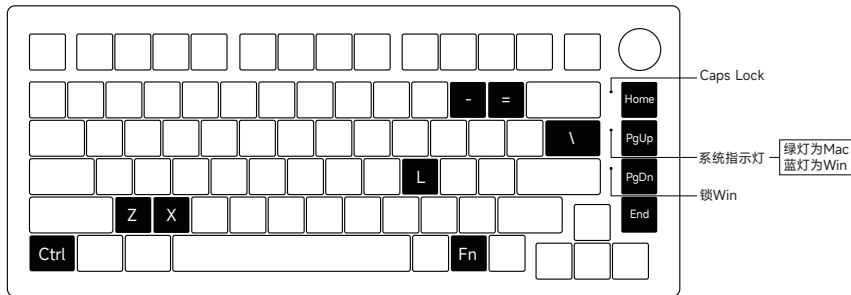

Fn+	Home	=	常亮、涟漪、如影随形、川流不息、流星
	PgUp		繁星点点、霓虹、光波、层出不穷、彩泉涌动
	PgDn		斜风细雨、踏雪无痕、聚合、一石二鸟、百花争艳
	End		呼吸、极光、正弦波、雨滴、峰回路转
	L		灯光开启 / 关闭
	\		在所有灯效RGB彩光模式，调节灯光颜色致7色单色+RGB循环
	空格		在侧边灯光模式，调节灯光颜色致7色单色+RGB循环

Fn+	“↑”	=	灯光变亮
	“↓”		灯光变暗
	“←”		灯光方向向左
	“→”		灯光方向向右
	“-”		灯光速度变慢
	“=”		灯光速度变快

Fn + Z	侧边灯光亮度切换
Fn + X	侧边灯光速度切换
Fn + 左Ctrl	侧边灯光模式切换

1. 键盘按键/灯光自定义需配合驱动进行。
2. 键盘有线模式下灯光可搭配驱动实现音乐律动。
3. 按键/灯光自定义及调用说明；请在我司官网下载“Akko Cloud”驱动。
4. 驱动下载地址www.akkogear.com

1. Akko机械键盘享受非人为损坏1年保修服务，即从购买日起，1年以内免费维修。
2. 如超过条款1的保修期限，Akko官方将收取不超过市场平均价格的费用提供维修服务。
3. 用户自行拆开键盘视为放弃免费维修服务，即使1年内损坏，也按照售后服务条款2执行。
4. 不同销售平台的特殊服务条款，以购买平台规则为准。

 
**注意
事项**

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品，请按照电子产品保护方式爱惜使用。

售后电话：0755-27728007 售后QQ：981572876

- *官方售后服务时间为每周一至周五上午10:00至下午18:00，节假日以国家法定节日休息为准。
- *因受维修时间，物流时间，零件采购时间等不可控因素，售后时间会有不同，以实际损坏情况评估为准，请用户耐心等待。

HotKeys

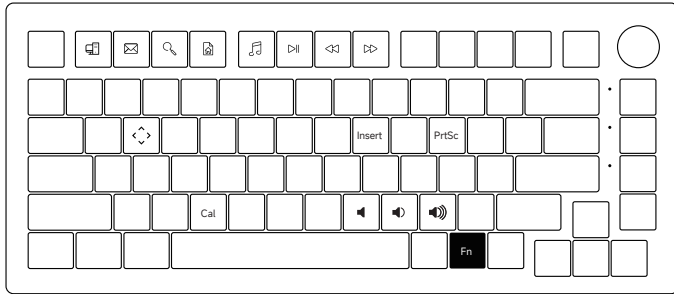


Fn+	F1	=	File Explorer
	F2	=	E-mail
	F3	=	Windows Search
	F4	=	Browser Homepage
	F5	=	Media

Fn+	F6	=	Pause /Playback
	F7	=	Previous Song
	F8	=	Next Song
	I	=	Insert
	P	=	PrtSc

Fn+	C	=	Calculator
	M	=	Mute
	<	=	Decrease Volume
	>	=	Increase Volume
	W	=	Swap W A S D with ↑ ↓ ← →

 System Commands(Windows)

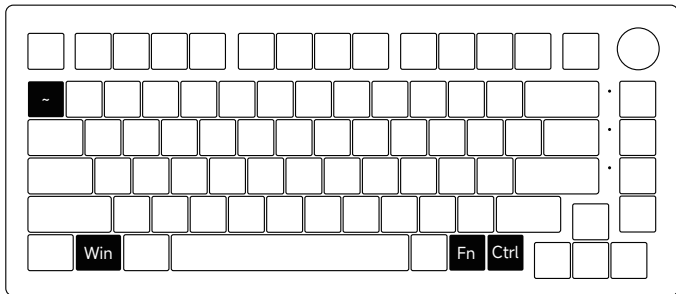

Lock Windows Key

 
Press Fn and left Win key

Restore Factory Settings

Hold down Fn and press ~ key for 5S

Revert Ctrl into Menu (APP) key

Hold down Fn and press right Ctrl for 3S

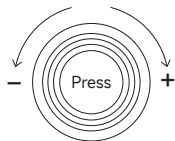

Adjust volume / light brightness



 
Back Switch Indicator

Left: Windows

Middle: Windows by default

Right: Mac

System Commands(Mac)

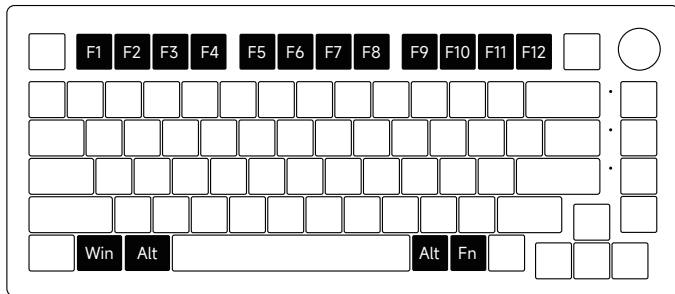

F1 Decrease display brightness

F2 Increases display brightness

F3 Open mission control

F4 Activate Siri

F7 Skip back (Audio)

F8 Pause/Play (Audio)

F9 Skip forward (audio)

F10 Mute

F11 Volume down

F12 Volume up

Left Win Option

 
Left Alt Command

Right Alt Command

Fn + (F1 ~ F12)

F1 ~ F12

Backlight Settings

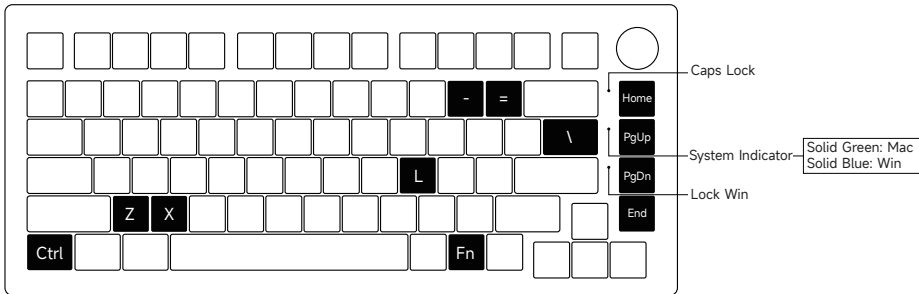

Fn+	Home	=	Effect 1 - Effect 5
	PgUp		Effect 6 - Effect 10
	PgDn		Effect 11 - Effect 15
	End		Effect 16 - Effect 20
	Z		PC Case Light Brightness Change
	X		PC Case Light Animation Speed Change
	Left Ctrl		PC Case Light Effect Change

Fn+	"↑"	=	Bright
	"↓"		Dim
	"←"		Set animation direction to left
	"→"		Set animation direction to Right
	"_"		Slower Animation
	"="		Faster Animation

Fn + \	In all lighting effects with RGB color mode, Set the backlight color to 7 single color with RGB loop effect.
Fn + Spacebar	Set the acrylic case backlight to 7 single color with RGB loop effect.
Fn + L	Light On / Off

Key/Lighting Effects Customization Instruction

1. The key/lighting effects customization must with Akko driver.
2. In wired mode, the lighting effects can also achieve music rhythm effects with Akko driver.
3. Please download the Akko Cloud driver on our website.
4. Users can download the driver via en.akkogear.com

1. Akko provides 1-yr warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Precautions Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.



Akko

www.akkogear.com



@akkogear



扫描关注官方微信



扫描关注官方微博