



REDRAGON

HARPE WIRELESS GAMING KEYBOARD



Please scan here to download user manual

Gaming Keyboard Operating Instructions

US UK

Dear user

Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.

- 1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

1

OS support

Windows XP/Vista/Win7/Win8/Win10



How to charge keyboard

Find the USB A to USB type-C cable in the package, plug the keyboard and connect it with computer for charging, the LED indicator of the keyboard will turn to blue. Remark: The LED indicator will flash in red when the keyboard is short of power.

How to connect the keyboard with a computer

Wired Connection

- 1. Take out the USB A to USB type-C cable in the package and connect the keyboard with your computer.
2. The computer will recognize and configure the keyboard automatically.
3. The keyboard will be ready for use when the configuration is finished.
4. Once the keyboard is powered up, charging begins. It may take about 5 hours for the keyboard to be fully recharged.

2

Wireless Connection

- 1. Slide the ON/OFF switch on bottom of keyboard to ON.
2. Take out the nano USB receiver and plug it into an available USB port on your computer. The computer will recognize and configure the keyboard automatically.
3. The keyboard will be ready for use when the configuration is finished.
4. In some cases, you may need to pair the keyboard. Turn on the keyboard and press [FN]+[P], plug the USB receiver into any available USB port on your computer within 20 seconds. The keyboard will be paired automatically. Make sure the keyboard has enough power before doing so.
5. The indicator will flash when the battery is low. Please recharge the keyboard in time or it will turn off automatically soon.

Warning: Charging input: 5V ---1A

Function Introduction

- 1. With standard USB interfaces, the keyboard can be used on computers without any software or driver installation.
2. There are 6 backlight effects:

Table with 3 columns: Operation, Backlight Mode, Description. Rows include [FN]+[Insert] (specture), [FN]+[Home] (Light ON), [FN]+[Page Up] (Three colors mix), [FN]+[Delete] (Running & Neon Light), [FN]+[End] (Breathing Backlight), and [FN]+[Page Down] (Lighting ON/OFF).

3

- 3. Press [FN] + [Win] To disable or enable the [Win] key
4. Press [FN] + [←] to slow down the speed of breathing backlight.
5. Press [FN] + [→] to add up the speed of breathing backlight.
6. Press [FN] + [↑] to increase the backlight brightness of the keyboard.
7. Press [FN] + [↓] to decrease the backlight brightness of the keyboard.
8. Press [FN] + [ESC] to set the keyboard to default setting.
9. Direct shortcut keys

Table with 4 columns: Icon, Numbered key function (1-10), Icon, Numbered key function (6-10). Includes My computer, Search, Refresh, E-mail, Calculator, Homepage, Stop, Previous track, Play/Pause, Next track.

4

- 10. Pair to computer (Wireless mode): [FN]+[P]
11. Multi-media keys ([FN]+[F1]-[F12])

Table with 3 columns: FN+Fn, Icon, Function name. Lists media player, volume down/up, mute, stop, previous/next track, play/pause, e-mail, home, my computer, and research functions.

5

FAQ

- 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



6

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7



REDRAGON

HARPE WIRELESS GAMING KEYBOARD



Please scan here to download user manual

Gaming Keyboard Operating Instructions

PT

Prezado usuário,


Obrigado por escolher a marca REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia.

- 1. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos.
2. Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia.

1

Sistemas operacionais compatíveis

Windows XP/Vista/Win7/Win8/Win10

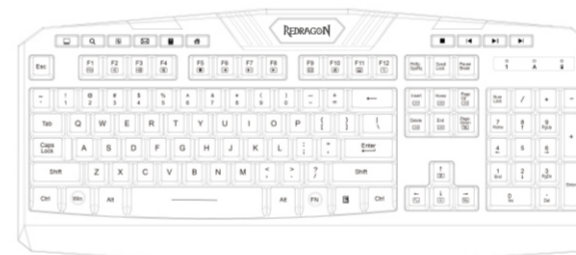

Como carregar o teclado

Pegue o cabo USB A para USB - C na embalagem, conecte no teclado e conecte no computador para carregar. O LED indicador do teclado acenderá em azul. Observação: O LED indicador vermelho quando o teclado estiver sem energia.

Como conectar o teclado ao computador

Conexão com fio

- 1. Retire o cabo USB A para tipo - C da embalagem e conecte o teclado ao computador.
2. O computador vai reconhecer e configurar o teclado automaticamente.
3. O teclado estará pronto para uso quando a configuração estiver concluída.
4. Quando o teclado for ligado, o carregamento será iniciado. Poderá levar até cinco horas para que o teclado seja totalmente recarregado.

2

Conexão sem fio

- 1. Deslize o interruptor ON/OFF (ligado/desligado), localizado na base do teclado, para a posição ON (ligado). Retire o receptor USB nano da embalagem e conecte em qualquer porta USB disponível do computador.
2. O computador vai reconhecer e configurar o teclado automaticamente.
3. O teclado estará pronto para uso quando a configuração estiver concluída.
4. Em alguns casos, pode ser preciso parear o teclado. Ligue o teclado e pressione [P], conecte o receptor USB em qualquer porta USB disponível no computador dentro de 20 segundos. O teclado será pareado automaticamente. É importante que o teclado tenha carga suficiente para isso.
5. A indicação luminosa piscará quando a bateria estiver fraca. É importante que você recarregue o teclado imediatamente ou ele se desligará automaticamente em pouco tempo.

Aviso: Entrada de carga: 5 V --- 1A

Apresentação da função

- 1. Com interfaces USB padrão, o teclado pode ser usado em computadores sem precisar instalar qualquer software ou driver.
2. Há seis efeitos de iluminação de fundo:

Table with 3 columns: Operação, Modo de iluminação de fundo, Descrição. Rows include [FN] + [Insert] (Espectro), [FN] + [HOME] (Iluminação LIGADA), and [FN] + [Page Up] (Combinação de três cores).

3

Table with 3 columns: Key combination, Function name, Description. Includes [FN] + [Delete] (Movimento e luz neon), [FN] + [End] (Iluminação de fundo oscilante), and [FN] + [Page Down] (Iluminação LIG/DESL).

- 3. Pressione [FN] + [Win] para desativar ou ativar a tecla [Win]
4. Pressione [FN] + [←] para reduzir a velocidade da iluminação de fundo oscilante.
5. Pressione [FN] + [→] para aumentar a velocidade da iluminação de fundo oscilante.
6. Pressione [FN] + [↑] para aumentar a intensidade da iluminação de fundo do teclado.
7. Pressione a tecla [FN] para reduzir a intensidade da iluminação de fundo do teclado.
8. Pressione [FN] + [ESC] para definir a configuração padrão do teclado.
9. Teclas de atalho direto

Table with 4 columns: Icon, Numbered key function (1-5), Icon, Numbered key function (6-10). Includes Meu Computador, Pesquisar, Atualizar, Email, Calculadora, Página inicial, Parar, Faixa anterior, Tocar/Pausar, Próxima faixa.

4

- 0. Parear com o computador (modo sem fio) [FN] + [P]
11. Teclas multimídia ([FN] + [F1] - [F12])

Table with 3 columns: FN+Fn, Icon, Function name. Lists media player, volume, mute, stop, previous/next track, play/pause, e-mail, home, my computer, and search functions.

5

Dúvidas frequentes

- 1. Se o teclado não responder, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente, ou experimente outra porta USB no computador.
2. Se ocorrer o derramamento de líquido sobre o teclado, remova imediatamente o cabo USB que liga o teclado ao computador. Seque o excesso de líquido e deixe o teclado em um local aquecido (por exemplo, sob uma lâmpada) para deixar que seque naturalmente antes de utilizá-lo novamente.



6

Summary table with columns: 型号 (Redragon K503-KS/8487), 名称 (说明书), 日期 (2021-12-29), 页码 (1 OF 1), 备注 (尺寸: 100x100mm, 材质: 80g书写纸, 印刷: 单黑色双面印刷), 文件编号, 绘图 (雷国建), 审核 (审核), 核准 (核准), 版本 (A.0).

