

# User Guide

**HONOR**

# Contents

## Get to know your computer

Appearance	1
Powering on and off	3
Charging the computer	3
Keyboard	4
Touchpad	5
Getting started	7

## Highlighted features

HONOR Device Clone	9
Phone Collaboration	9
PC Collaboration with Tablet/Foldable Phone	11
TV Collaboration	13
HONOR Share	14
More Tips	16

## Learn about Windows 11

Using the Start menu	18
Action center	18

## Accessories and extensions

Bluetooth mouse (optional)	20
----------------------------	----

## About this user guide

## Safety information

 
## Personal Information and Data Security


## Legal Notice

# Get to know your computer

## Appearance

**i** Keyboard layout varies by country or region. Actual product may differ.

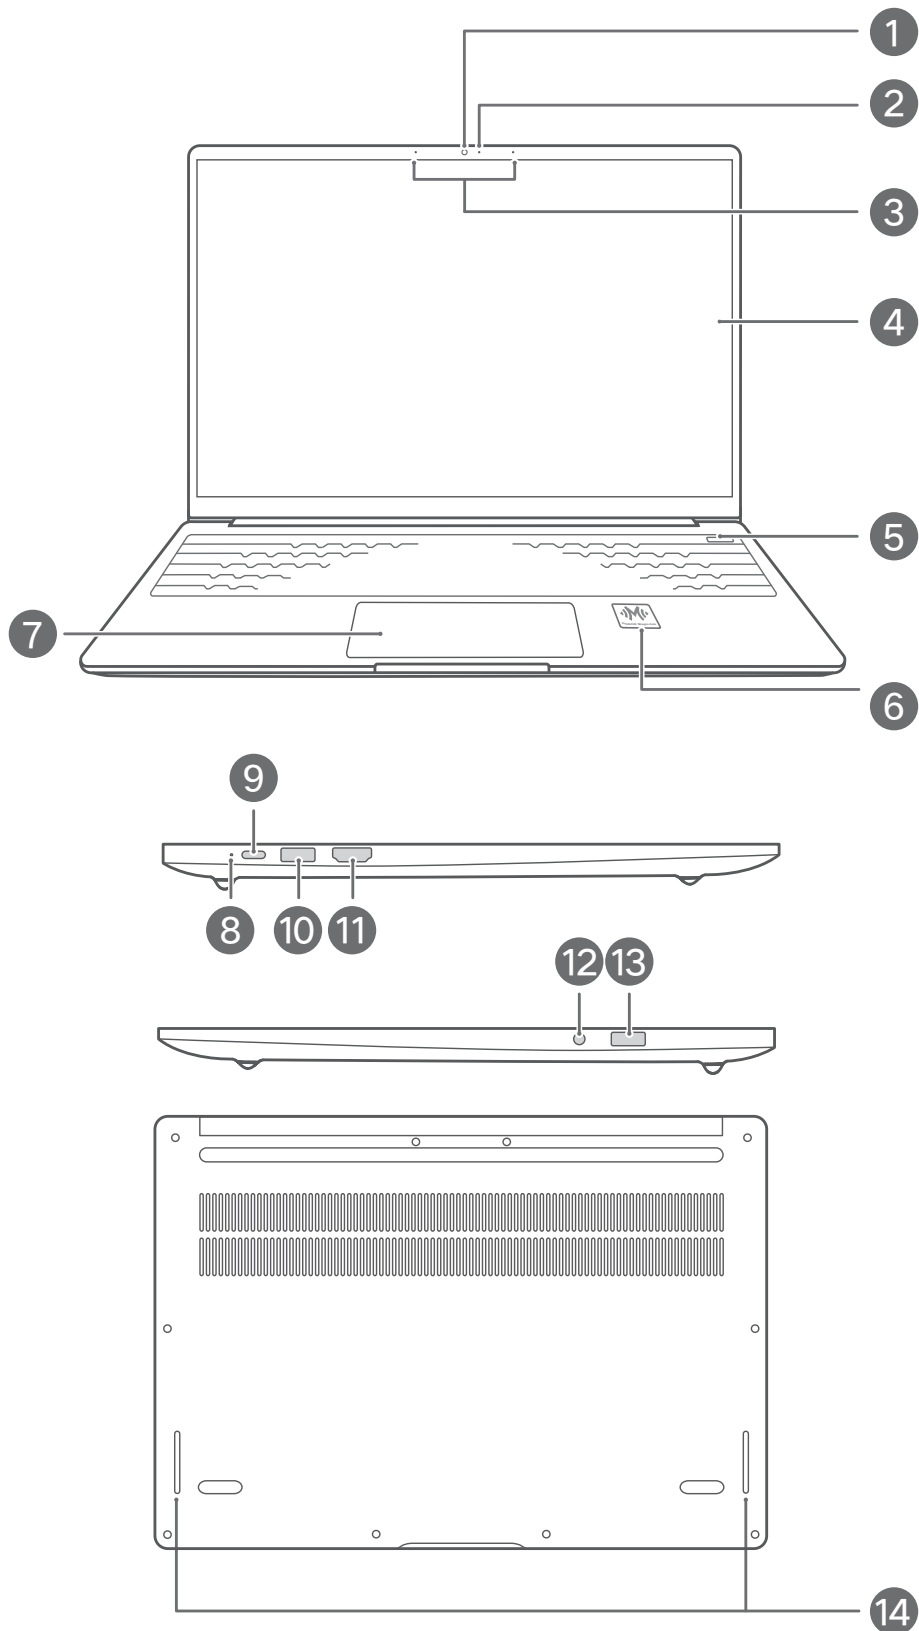




1	<b>Camera</b>	Can be used to take photos or make video chats.
2	<b>Camera indicator</b>	Indicates the camera's status. Lights up steady white when the camera is active.
3	<b>Microphone</b>	Use the microphone to conduct video meetings, voice calls, or make audio recordings.
4	<b>Display</b>	Displays the computer desktop.
5	<b>Fingerprint power button</b>	After enrolling a fingerprint, simply press the power button with the enrolled finger to power on and unlock the computer without having to enter a password.
6	<b>HONOR Magic-link icon</b>	<p>Tap the NFC detection area on some Honor phones against the HONOR Magic-link icon on the computer to use the HONOR Magic-link feature.</p> <p> Do not tear off or damage HONOR Magic-link icon as it may cause HONOR Magic-link to stop working properly.</p>
7	<b>Touchpad</b>	Provides similar functionality to a mouse. A convenient way to control the computer.
8	<b>Charging indicator</b>	<p>Indicates the battery's charge status when charging:</p> <ul style="list-style-type: none"> <li>• Blinks white when charging.</li> <li>• Steady white when the computer is fully charged and stops charging.</li> </ul>
9	<b>USB-C port</b>	<ul style="list-style-type: none"> <li>• Connects the power adapter to charge the computer.</li> <li>• Connects to mobile phones, USB drives, and other external devices to transfer files.</li> </ul>
10	<b>USB-A (USB 3.2 Gen 1) port</b>	Connects to mobile phones, USB drives, and other external devices to transfer data.
11	<b>HDMI port</b>	A high-definition multimedia port. Connects to external displays.
12	<b>Headset jack</b>	Connects to a headset.
13	<b>USB-A (USB 3.2 Gen 1) port</b>	Connects to mobile phones, USB drives, and other external devices to transfer data.
14	<b>Speaker</b>	The speakers output sound.

## Powering on and off

When powering on the computer for the first time, connect the power adapter, and the computer will power on automatically. The computer will enter the startup screen shortly after the screen lights up.

When the computer is powered off, press the Power button until the screen or keyboard lights up to power on or wake the computer.

When using the computer, click  >  to sleep, shut down, or restart the computer.

 
 Press and hold the power button for approximately 10 seconds to force shutdown the computer. Force shutdowns may cause unsaved data to be lost. Use with caution.

## Charging the computer

The computer will display a prompt when the battery is running low. If you see this prompt, charge your computer as soon as possible or it will affect your normal use.

### Charging the computer with a power adapter

The computer features a non-removable rechargeable battery. Connect the power adapter and charging cable to charge the computer. The battery charges more quickly when the computer is powered off or in Sleep mode.

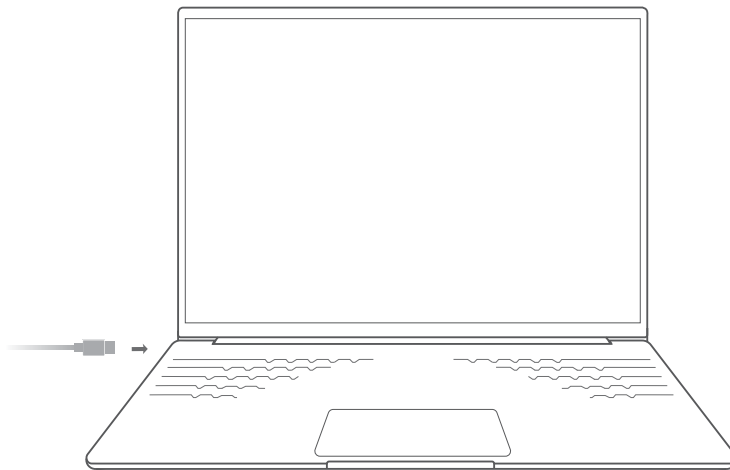

### Safety information

- Charge the computer at room temperature in a well-ventilated, shaded area. Charging the computer in hot environments may damage the internal components.
- Charging duration may vary based on the ambient temperature and battery use.
- It is normal for the computer to become warm after prolonged use or charging. If it becomes hot to the touch, disable non-essential features and disconnect the charger.

 











- The battery is subject to wear over time. If the computer's standby time appears to have fallen, do not attempt to replace the battery by yourself. Instead, take the computer and proof of purchase to an authorized Honor Customer Service Center for assistance.

## Keyboard

 Keyboard keys may vary depending on your device model.

### Shortcut keys

Press the Fn key, the indicator lights up, which means the F keys, such as F1 and F2, are now in shortcut (hotkey) mode to perform common actions.

	Decrease screen brightness.		Enable or disable the microphone.
	Increase screen brightness.		Turn off the camera.
	Enable or disable the touchpad.		Switch the projection mode.
	Mute or unmute.		Open HONOR PC Manager.
	Decrease the volume.		Open the sidebar.
	Increase the volume.		Open the screenshot tool

### Switching between shortcut and function key modes

In function key mode, the F keys have different functions depending on the software that is running.

To use the F keys as function keys, you can:

- Press the Fn key and the indicator will light up. The F keys, such as F1 and F2, will then work as shortcuts (hotkeys). To return to function key mode, press the Fn key then the indicator will turn off.
- Press Fn+r keys to switch the screen refresh rate.
- To make the F keys work as function keys by default, go to Settings > System in HONOR PC Manager and enable "Prioritize functions". To switch back to the shortcut key mode, enable "Prioritize hotkeys".

### Windows 11 new keyboard shortcuts

Key Combination	Function
Win+a	Open "Quick setup".

 
 
 
 
 
Key Combination	Function
Win+n	Open "Notification center" and Calendar.
Win+w	Open widgets panel.
Win+z	Quick access to snap layout. <i>i</i> This function is only enabled when there is a window in the foreground.


## Touchpad

The touchpad provides similar functionality to a mouse and is a convenient way to control the computer.


*i* Not all gestures are available in all apps.

### Common touchpad gestures

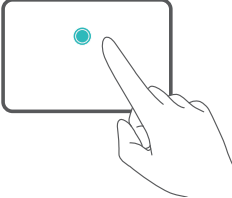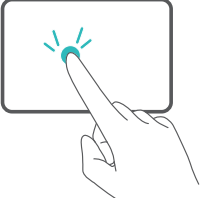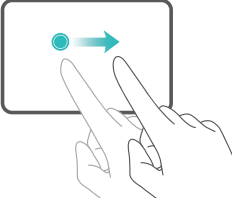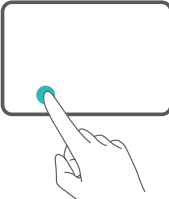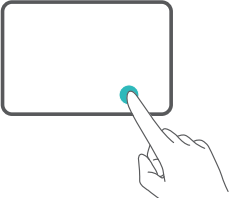
	<b>Tap with one finger:</b> Left-click.
	<b>Tap twice with one finger:</b> Double-click.
	<b>Slide with one finger:</b> Move the cursor.
	<b>Press the left touchpad button:</b> Left-click.
	<b>Press the right touchpad button:</b> Right-click.

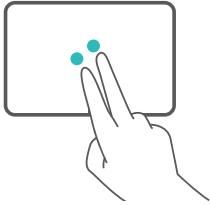 


**Tap with two fingers:** Right-click.

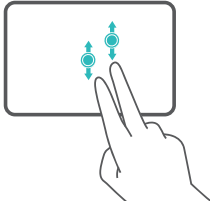 

 
**Slide up or down with two fingers:** Scroll up or down.

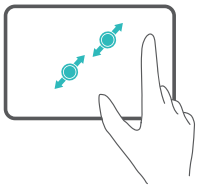

 
**Pinch in or stretch out with two fingers:** Zoom in or out.

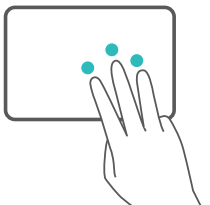

 
**Tap with three fingers:** Open search.

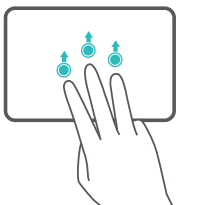

 **Slide up with three fingers:** See all open windows.

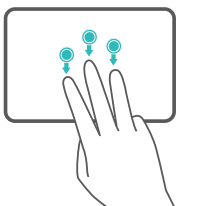

 **Slide down with three fingers:** Show the desktop.

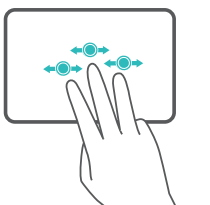

**Slide left or right with three fingers:** Switch between open windows.





**Tap with four fingers:** Open "Notification center" and Calendar.




## Modify touchpad settings

 
You can modify touchpad settings to suit your own preferences.

- 1 Click  >  to open Settings.
- 2 On the Settings screen, click **Bluetooth & devices** > **Touchpad** to:
  - Enable or disable the touchpad.
  - Automatically enable or disable the touchpad when a mouse is connected.
  - Change the touchpad scroll direction.
  - Configure touchpad gestures.

## Getting started

### Step 1: Connecting to a network

Click  in the lower right corner of the desktop. Select a Wi-Fi network and follow the instructions to establish a connection.

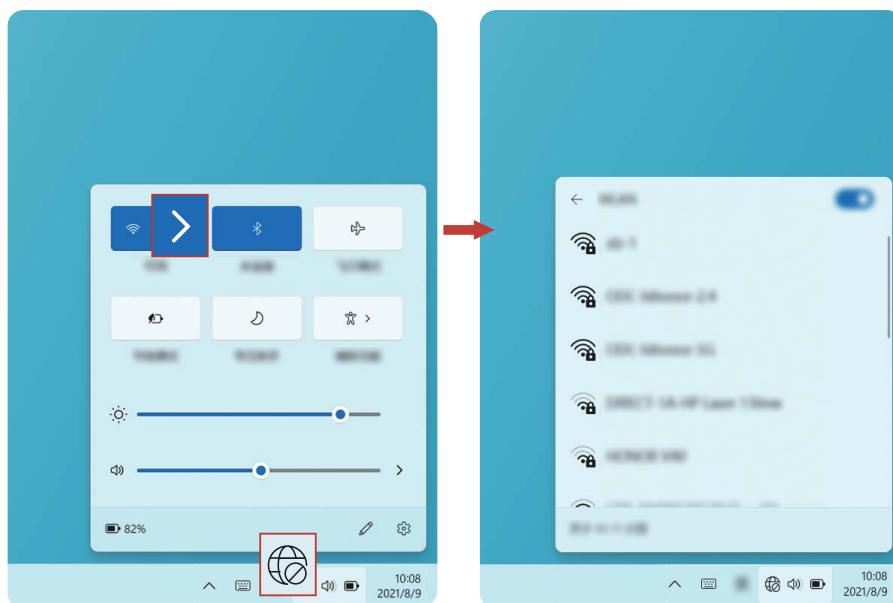

### Step 2: Activating Windows


Windows will activate automatically when you connect to the Internet for the first time.


Click  > **Settings** > **System** > **Activation** to check if Windows has been activated.

 
If Windows cannot be activated, restart the computer, connect to the network, and try again. If the issue persists, connect to a different network or wait a while before trying again.

 If Windows is not activated, some features on your computer may be restricted.

### Step 3: Enrolling a fingerprint


If you skipped the fingerprint enrollment process during the initial setup, click  > **Settings** > **Accounts** > **Sign-in options** > **Fingerprint recognition**. In the Sign-in option, set the Sign-in password first and then follow the instructions to enroll your fingerprint.

-  • Ensure that your fingertips are clean and dry, or your fingerprint may not be enrolled correctly.
- Each user can enroll up to 10 fingerprints.

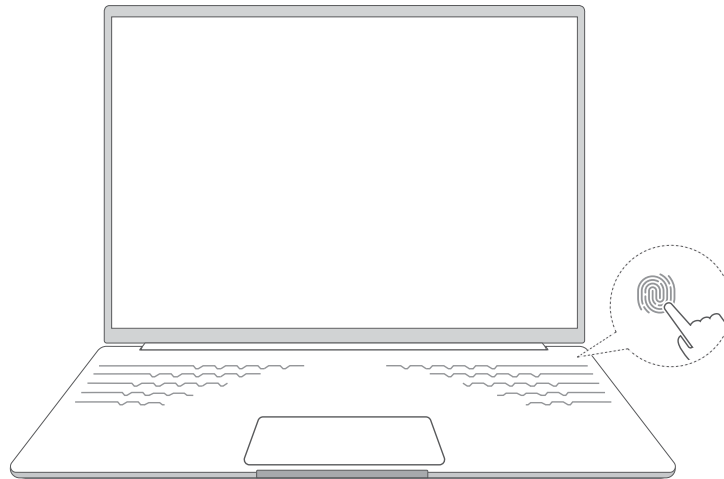

### Step 4: Updating the drivers

You can manage drivers in HONOR PC Manager. If driver updates are available, follow the instructions to complete the updates.


-  Check and update your drivers regularly to improve the stability and performance of the computer.

# Highlighted features

## HONOR Device Clone

### Device Clone with no worries.


By using **HONOR Device Clone**, it only takes a short time to transfer images, videos, and other files from the old computer to the new HONOR PC. The personal files of the old computer and HONOR PC can be seamlessly connected.

 Only support old computer with Windows 7/10/11 systems.

### Transfer data from a non-HONOR device

- 1 On the old computer and HONOR PC, enable **Bluetooth** and **Wi-Fi**, and connect the computers to the same network.
- 2 On HONOR PC, enable **HONOR PC Manager**, click **Home > Device Clone > This is the new device**.
- 3 On the old computer, download and install **HONOR Device Clone**.
- 4 On the old computer, enter the **HONOR Device Clone** app. Confirm that the connection codes are the same following the on-screen instructions. Establish a connection between the old computer and the HONOR PC.
- 5 On HONOR PC, select the data to be transferred, click **Start** to complete data cloning.

### Transfer data from an HONOR device



- 1 On the old computer and HONOR PC, enable **Bluetooth** and **Wi-Fi**.
- 2 On the HONOR PC, enable **HONOR PC Manager**, and click **Home > Device Clone > This is the new device**.
- 3 On the old computer, enable **HONOR PC Manager**, and click **Home > Device Clone > This is the old device**.
  -  If the old computer does not have **HONOR PC Manager**, install the **HONOR Device Clone** app on the old computer following the on-screen instructions.
- 4 Confirm that the connection codes are the same following the on-screen instructions on the old computer. Establish a connection between the old computer and the HONOR PC.
- 5 Select the data to be transferred on HONOR PC. Click **Start** to complete data cloning.

## Phone Collaboration

### Connect your PC and phone

Connect your PC and phone to improve work efficiency by using the keyboard and mouse to control your phone on your laptop to share and edit files across systems.

### Connect your PC and phone with OneHop:

- 1 Make sure that the computer supports the HONOR Share sensor or has the sensor label .
- 2 On the computer, turn on Wi-Fi, Bluetooth, and **HONOR PC Manager**, and agree to the User License Agreement.
- 3 Turn on NFC on the phone.
- 4 Place the NFC area on the phone against the HONOR Share sensor or the  label on the computer until a prompt tone or vibration is received. Follow the on-screen instructions to complete the connection.

### Connect your PC and phone with a cable

- 1 Connect your PC and phone with a USB cable.
- 2 On the computer, open **HONOR PC Manager**, go to **Multi-Screen Collaboration > Phone > Other ways to connect**.
- 3 Follow the pop-up box on your phone to complete the connection.

### Disconnect your PC and phone

After the work is done, you can use the following methods to disconnect the devices:

- On your PC, enable **HONOR PC Manager** and click **Disconnect**.
- Swipe down from the status bar at the top of your screen to open the notification panel and tap **DISCONNECT**.
- If your PC and phone are connected with a USB cable, remove the cable between your PC and phone to disconnect.

### Transfer and edit files between your PC and phone

Once the phone is connected to your PC, you can use the mouse in the phone window on the computer to directly drag and drop files to your PC to use or edit.

#### Transfer files from the phone to your PC:

- In the mirrored phone window on your PC, open **Gallery** or **Files**, and long press to select images, videos, or other files. When the drag icon appears, drag them to the PC.
- In the mirrored phone window on your PC, select images or text and drag them to the document being edited on the computer.

For example, you can drag a photo from your phone or text from the Notepad app to a Microsoft Office document you are editing on your computer.

#### Transfer files from PC to phone:

- Drag images and videos from the PC to **Gallery** in the mirrored phone window on the computer.
- Drag documents from the PC to **Files** in the mirrored phone window on the computer.
- Drag images and text from the PC to a document being edited on the phone through the mirrored window on the computer.

For example, you can drag an image from the computer to a note in the Notepad app being edited on your phone.


### Edit files:


Drag text, images, audio, and video files from your phone or PC to an app or document for quick editing.

For example, you can select an image on the phone with the mouse, then long click and drag it to the PowerPoint presentation on the computer.

### Open multiple phone apps on the computer

When the phone is connected to your PC, you can open 3 phone app windows at maximum on the computer.


In the mirrored phone window on the laptop, open an app, and click  on the mirrored window to open a window for the app on the laptop. You can continue to open other apps on your phone. Each window is used independently and does not affect the other.

 Depending on your device, you may be able to open 2 or 3 phone windows simultaneously.

### Answering video calls on PC

When the phone is connected to your PC, you can answer video calls (such as WeChat and QQ) on the laptop. During the call, audio and video are recorded and played through the laptop or the speaker or camera connected to it.

During the call, swipe down from the status bar to open the notification panel and tap PLAY AUDIO/VIDEO ON PHONE/PLAY AUDIO/VIDEO ON PC to change the player.

-  . Please make sure to update HONOR PC Manager on your laptop to version 10.1 or later.
- Some apps may not support switching to the laptop for video calls.

## PC Collaboration with Tablet/Foldable Phone



Tablet collaboration, connects PC and tablet/ foldable phone to expand and complement the screen capabilities and improve work efficiency by using stylus.

 For the support of this function, please refer to the actual version of HONOR PC Manager.

### Connect PC to tablet/foldable phone


**1** Make sure **Wi-Fi** and **Bluetooth** are enabled on the computer and the tablet/foldable phone. When connecting, please make sure that the tablet/foldable phone is on, and the foldable phone is unfolded.

**2** On the desktop, open **HONOR PC Manager**, and click **Multi-Screen Collaboration > Tablet Collaboration**.

 You can click  > **Tablet Collaboration** at the bottom-right corner of the desktop on the taskbar and follow on-screen instructions to connect the PC and the tablet/foldable phone.

- 3 Select a tablet/foldable phone on the device list, click **Connect**, and follow the on-screen instructions to complete the connection.

When successfully connected, on the **Tablet Collaboration** interface, you can switch between **Mirror**, **Extend** and **Share** mode. In addition, the audio channel can be changed.

-  Only some HONOR tablet and foldable phones support this feature. Please refer to the actual usage. When the screen is locked and off, the device cannot be found.

### **Mirror mode**

When the PC is connected, on the **Tablet Collaboration** interface, you can select the **Mirror** mode.

In the **Mirror** mode, the home screen of the tablet/foldable phone is projected to the computer desktop in a similar layout.

For example, when the tablet synchronously displays the computer screen, computer files can be edited and saved with a stylus pen on the tablet.

### **Extend mode**

When the computer is connected, on the **Tablet Collaboration** interface, you can select the **Extend** mode.

The home screen of the tablet/foldable phone is projected to the left or right side of the computer desktop in the layout of extended display. Click **Extend > Display Settings**, and select the relative position and sidebar location between the computer and the tablet/foldable phone.

In the **Extend** mode, use the tablet/foldable phone as the secondary screen. Open an app on the computer, dragging it with a mouse should be displayed on the tablet/foldable phone, and others will be displayed on the computer screen.

For example, you can participate in video conferences on your tablet/foldable phone while editing PPTs on your computer.


### **Share mode**

When the computer is connected, on the **Tablet Collaboration** interface, you can select the **Share** mode,

click **Share > Display Settings**, and select the relative position between the PC and the tablet/foldable phone to your preference.



In the **Share** mode, you can operate the PC and the tablet/foldable phone simultaneously with the keyboard and mouse, and drag and edit images, videos, documents, and other files between the two devices.

For example, you can use your keyboard to edit documents on the tablet/foldable phone.

-  Please update your HONOR tablet/ foldable phone to Magic UI 6.0 and later. This feature may vary depending on your device.

## Exit Tablet Collaboration




When projected, disconnect with the following methods:

- Go to **Tablet Collaboration > Disconnect**, exit Tablet Collaboration.
- Click  > **Tablet Collaboration** at the bottom-right corner of the desktop on the taskbar and follow on-screen instructions to exit Tablet Collaboration.
- Swipe down from the status bar at the top of the tablet screen to open the notification panel and tap to exit Tablet Collaboration.
- In the Mirror/Extend mode, you can also click  on the sidebar of the tablet/foldable phone and follow on-screen instructions to exit Tablet Collaboration.


## TV Collaboration

Through wireless connection, you can connect your laptop to a larger display (such as HONOR Vision) for business and entertainment, or PC content on the TV.

### Connect the PC and TV

- 1 On the PC and TV, turn on **Wi-Fi** and **Bluetooth** and connect them to the network.
  -  If the TV only supports LeboCast protocol or Cast+ 2.0 and below, connect both devices to the same LAN. This feature requires the Internet for the first-time connection.
- 2 On the desktop of your PC, open **HONOR PC Manager**, and click **Multi-Screen Collaboration > TV Collaboration**.
  -  You can also go to the bottom-right corner of the computer desktop and click  > **TV Collaboration**. Then follow the instructions to connect your PC and TV.
- 3 Select the name of your TV or wireless projector in the device list, click **Connect**, and follow instructions to complete the screen projection.

After the devices are connected, in the **TV Collaboration** interface, you can switch between **Mirror** and **Extend** mode. In addition, the audio channel can be changed.

-  For the first-time connection, **Mirror** is selected by default. Otherwise, the previous connection mode will be used.

### Mirror mode

After the screen projection is completed, in the **TV Collaboration** interface, you can select the **Mirror** mode. In the **Mirror** mode, the screens of the PC and TV are synchronized. The PC screen is projected to the TV screen in a similar layout. The same content is displayed on the TV and PC.

For example, the image of videos or video meetings on the PC can be projected to the TV display for a better view.


## Extend mode

After the screen projection is completed, in the **TV Collaboration** interface, you can select the **Extend** mode. In the **Extend** mode, you can use the mouse to control both screens simultaneously, with the TV screen treated as the secondary screen. For example, you can open an application on the primary display (PC) and drag it to the TV. All other PC content will still be displayed on the PC screen.

Go to **Extend mode > Display settings > Multi-display** and arrange the relative positions of the displays according to your need.

In this mode, you can edit images on the TV while working with PowerPoint slides.

## Exit TV Collaboration

- After the screen projection is completed, in the **TV Collaboration** interface, you can click **Disconnect** to exit **TV Collaboration**.
- Or you can go to the bottom-right corner of the computer desktop and click  on the taskbar. Then follow instructions to exit **TV Collaboration**.


# HONOR Share

## Use HONOR Share to share files fast

HONOR Share is a technology for fast wireless transfers of images, videos, documents, and other files between devices. It uses Bluetooth to discover other HONOR Share-enabled devices in the vicinity and then transfers files via a direct Wi-Fi connection. No mobile data is required during the transfer process.

## Enable HONOR Share

### Enable HONOR Share in any of the ways below:

- **On the PC:** Open **HONOR PC Manager**, select **HONOR Share**, and make sure **Discoverable to other devices** is turned on.
  - Or you can click  > **HONOR Share** on the taskbar.
- **On the phone:** Swipe down from the status bar to access the notification panel (continue swiping down to display more content), long-press HONOR Share to enter the settings interface, and turn on **HONOR Share**.

## Transfer files between computers using HONOR Share

With **HONOR Share**, you can transfer documents, photos, videos, and other files to multiple nearby HONOR computers in a wireless way.

- 1 On the PCs receiving the file, enable **HONOR Share** and make sure **Discoverable to other devices** is turned on.
- 2 Go to the PC with the file and send it in either of the ways below:



- Open **HONOR PC Manager** on the desktop, select **HONOR Share** and drag the selected file to the icons of other devices.
- Right-click the file to be shared, select **HONOR Share** to receive the file from the device list.

**3** Click **Accept** on the other PC to start the transfer.

Go to **HONOR PC Manager > HONOR Share > Open received files** on the devices receiving the file to see the received files.


### Share files between the PC and phone using HONOR Share

Share, view, and edit files between your computer and your HONOR phone without the need for a data cable.

#### From PC to phone:

- 1** Enable **Bluetooth** on the phone and PC.
- 2** Go to **HONOR PC Manager > HONOR Share** on the PC and make sure **Discoverable to other devices** is turned on.
- 3** Go to the phone, swipe down from the status bar to access the notification panel (continue swiping down to display more content), long-press **HONOR Share** to enter the settings interface, and turn on **HONOR Share**.
- 4** Select the file to be sent on the PC, right-click with the mouse and go to **Show more options > HONOR Share**. The computer will search for phones that have **HONOR Share** enabled. Select the phone to receive the file.
  - i** You can also open **HONOR PC Manager** on the PC, select **HONOR Share** and drag the selected file to the icons of other devices.
- 5** Follow on-screen prompts to receive the file on the phone.

#### From phone to PC:

- 1** Enable **Bluetooth** on the phone and PC.
- 2** Go to the phone, swipe down from the status bar to access the notification panel (continue swiping down to display more content), long-press **HONOR Share** to enter the settings interface, and turn on **HONOR Share**.
- 3** Go to **HONOR PC Manager > HONOR Share** on the PC and make sure **Discoverable to other devices** is turned on.
- 4** Long press the file to be shared on your phone, tap  **> HONOR Share**, select the name of the PC and receive the file on that PC.
- 5** Follow on-screen instructions to receive the file on the PC.

Please update **HONOR PC Manager** to the latest version.

## More Tips

### Touch the power button to unlock with fingerprint ID

If the PC is locked, touch the power button with your enrolled finger to unlock the PC.


- 1 On the taskbar, click the **Windows Key > Settings > Accounts > Sign-in options > FingerPrint recognition(windows hello)** to verify or set the account password and PIN.
- 2 Follow the on-screen prompts to enroll your fingerprint on the power button.

 The location of the fingerprint sensor varies by model.

### Copy text in the image

Recognize text in images with one click. Copy, edit the text, and perform other operations without having to type.

#### Method 1:



- 1 Left-click **HONOR PC Manager** on the taskbar.
- 2 Click . After the screen is captured, the text recognition result appears to the right of the image.
- 3 In the text recognition result box, select the desired text and press CTRL + C to copy the text.

#### Method 2:

Open an existing image using the image viewer and perform text recognition.

### Place the phone on the computer to record the computer screen

After the phone is connected to the computer, place the phone on the computer to project and record games, videos, and other contents displayed on the computer screen.


- 1 After the phone is connected to the computer, touch the NFC area on the back of the phone against the HONOR Share sensor on the computer or the  label until you hear the prompt tone or vibration to project and record the computer screen.
- 2 Tap  on the phone to stop the recording. The recording is automatically saved to the Gallery on your phone.

 This feature works for computers empowered by Intel processors only.

### Care for your eyes with the Eye Comfort mode

It is darker at night. If you need to continue working or studying for a long time, you can turn on the Eye Comfort mode to effectively reduce blue light radiation and adjust the screen to a warmer tone to protect your eyes.


Right-click on the desktop, go to **Show More Options > Display Manager**, and turn on or off the **Eye Comfort** mode.


-  After turning on the Eye Comfort mode, the screen will become a little yellowish. This is normal.
- If you uninstall **HONOR PC Manager**, you will not be able to use this feature.


### Enjoy high performance in the Performance mode

We added the Performance mode to deliver the best performance to you. Performance mode can upscale the performance of the device. When it is enabled, the computer may have an increase in fan sound, higher heat, and a decrease in battery power in certain high power consumption scenarios, which is normal.

Keep the PC connected to a power source and the battery above 20%. Turn on/off the Performance mode in any of the ways below:

Method 1: Press the Fn key, press **Fn + P** until  appears on the desktop. Then the Performance mode is turned on.


Method 2: Open **HONOR PC Manager** on the desktop and click **System optimisation > Power management**. If  appears on the desktop, then the Performance mode is turned on.

-  After you have turned on the Performance mode, it will be turned off automatically when you disconnect the power supply, when the battery is below 20%, and the computer is put on standby, sleep, or restart. If you need to enable this mode, please turn it on again using the same method described above.

### Restore your PC to the factory settings

If your computer stops working correctly, you can use the built-in **F10** system-restore function to restore your computer system to its initial state in a short time and protect your important files.


When turning on the computer, long-press or click the **F10** key to enter the system-restore wizard and follow the on-screen instructions to restore the factory settings.

 
-  Restoring the system will delete the data in the C drive (including personal data on the desktop, and in Downloads and Files). Please back up important files in advance.



# Learn about Windows 11

## Using the Start menu

Use the Start menu to access apps, settings, and files on your computer.

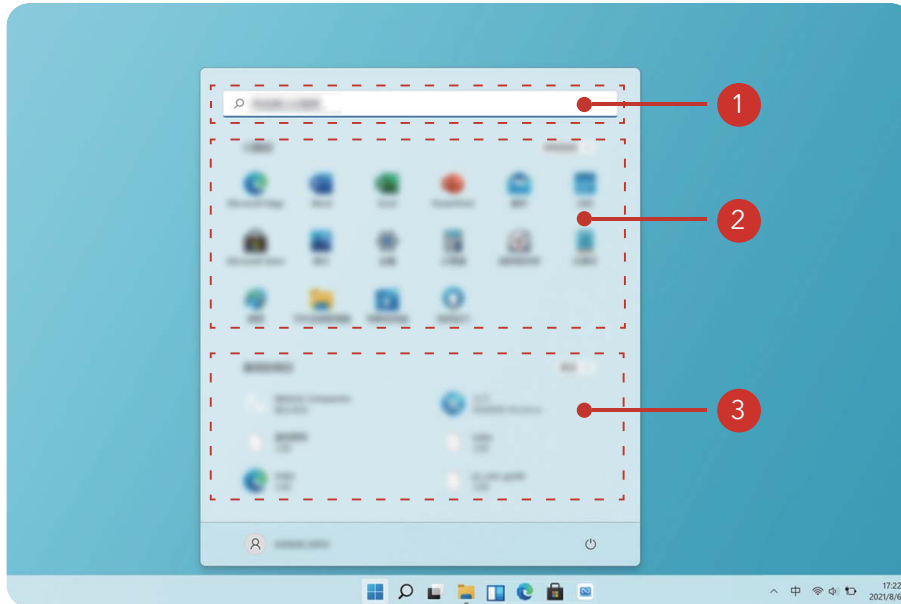Click  to open the Start menu.




- Click  to change, lock, or sign out of the current user account.
- Click  to sleep, shut down, or restart the computer.
- **1** is the search area: enter the content to be searched here.
- **2** is the application area: drag up and down to see all applications and programs.
- **3** is the recent files area: shows recently opened files and new applications.

## Action center

 In the action center, you can quickly turn on or off features or change the settings.

Press **Win+a** to open the action center. You can then:

- Quickly open Settings, projection options, and more.
- Quickly access frequently used settings (such as Battery saver, Flight mode, screen brightness, and more).

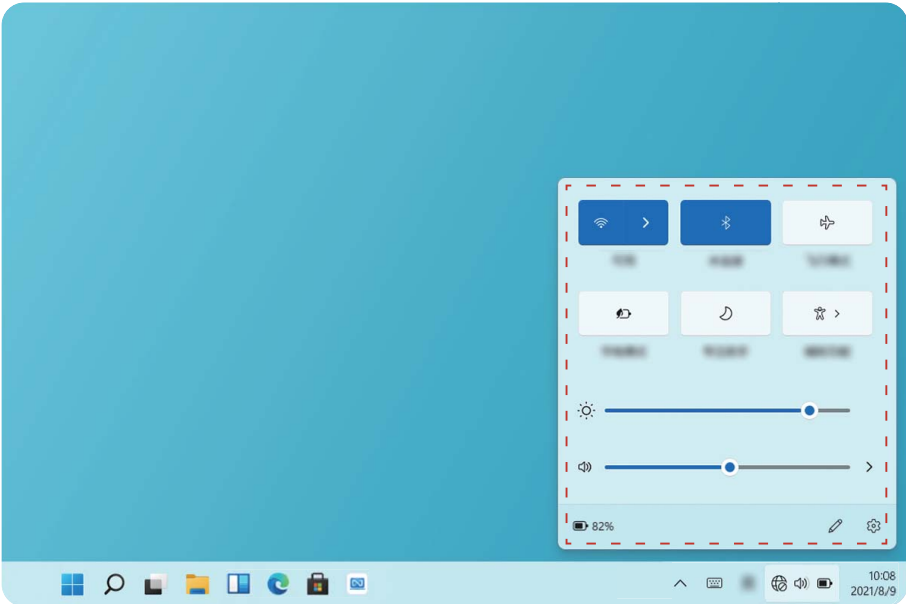


# Accessories and extensions

## Bluetooth mouse (optional)

The Honor Bluetooth mouse connects to the computer wirelessly via Bluetooth. To start using the Bluetooth mouse, you must first pair it with the computer.

### Getting to know the Bluetooth mouse

 **i** The Bluetooth mouse is an optional accessory and is sold separately.

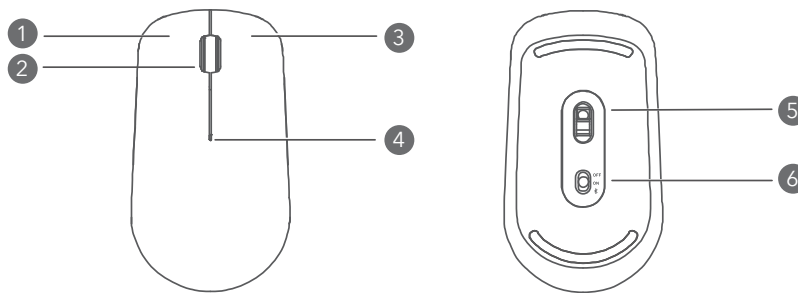


1	Left button	2	Scroll wheel + Middle button
3	Right button	4	LED indicator <b>i</b> If the indicator blinks red, the battery is low on power and should be replaced.
5	Sensor	6	Power/Bluetooth pairing switch




### Install the battery

 As illustrated below, remove the battery cover from the mark located at the bottom end of the mouse. Insert one AA battery, making sure to match the + and - signs in the battery compartment. Close the cover.



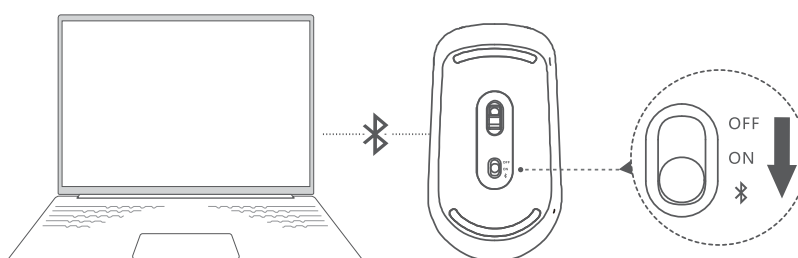


### Pairing the Bluetooth mouse with the computer



- 1 Toggle the Bluetooth pairing switch at the bottom of the mouse to  for approximately 3 seconds. Once the indicator starts blinking, the Bluetooth mouse is ready to pair.
- 2 On your computer, click  >  > **Bluetooth & devices**, click **Add device** to add Bluetooth devices, and choose HONOR Mouse in the Bluetooth device list. Allow a few moments for pairing to complete.

# About this user guide

 This user guide is only for use with associated computers that run the Windows 11 operating system. In this guide, you will learn about the basic features of your computer. For more information about Windows 11 features, visit <https://www.microsoft.com>, or click  >  on your desktop.

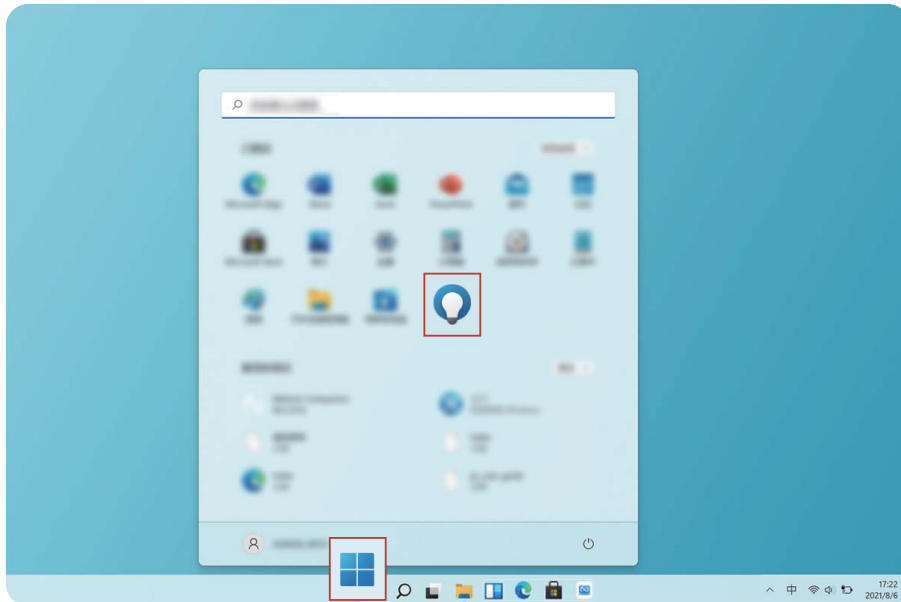

The optional accessories and software described in this guide may not be available or up-to-date. The system environment described in this guide may vary from your actual system environment. Images in this manual may differ from the actual product. All illustrations are for reference only. Actual product may differ.

## Indicators



Highlights important information and tips, and provides additional information.



Indicates potential issues that may lead to damage, data loss, and other unexpected problems if left unattended.



Warns of potential hazards that can result in serious personal injury if not circumvented.



# Safety information

This section contains important information about the operation of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.


## Electronic device

Do not use your device if using the device is prohibited. Do not use the device if doing so causes danger or interference with other electronic devices.

## Interference with medical equipment

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device where prohibited.
- Some wireless devices may affect the performance of hearing aids or pacemakers. Consult your service provider for more information.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If using a pacemaker, hold the device on the side opposite the pacemaker and do not carry the device in your front pocket.

## Protecting your hearing when using a headset

-  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Using a headset at high volumes may damage your hearing. To reduce this risk, lower the headset volume to a safe and comfortable level.
- Exposure to high volumes while driving may cause distraction and increase your risk of an accident.

## Areas with flammables and explosives

- Do not use the device where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your device in these environments increases the risk of explosion or fire. In addition, follow the instructions indicated in text or symbols.
- Do not store or transport the device in containers with flammable liquids, gases, or explosives.

## Traffic security

- Observe local laws and regulations while using the device. To reduce the risk of accidents, do not use your wireless device while driving.
- Concentrate on driving. Your first responsibility is to drive safely.

- RF signals may affect the electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- Do not place the device over the air bag or in the air bag deployment area in a motor vehicle. Doing so may hurt you because of the strong force when the air bag inflates.
- Wireless devices may interfere with the airplane's flight system. Do not use your device where wireless devices are not allowed according to the airplane company's regulations.

### **Operating environment**

- Avoid dusty, damp, or dirty environments. Avoid magnetic fields. Using the device in these environments may result in circuit malfunctions.
- Do not use your device during thunderstorms to protect your device against any danger caused by lightning.
- Ideal operating temperatures are 0 °C to 35 °C. Ideal storage temperatures are -10 °C to +45 °C. Extreme heat or cold may damage your device or accessories.
- Do not expose your device to direct sunlight (such as on a car dashboard) for prolonged periods.
- To protect your device or accessories from fire or electrical shock hazards, avoid rain and moisture.
- Keep the device away from sources of heat and fire, such as a heater, microwave oven, stove, water heater, radiator, or candle.
- Stop using your device or applications for a while if the device is overheated. If skin is exposed to an overheated device for an extended period, low temperature burn symptoms, such as red spots and darker pigmentation, may occur.
- Do not allow children or pets to bite or suck the device or accessories. Doing so may result in damage or explosion.
- Observe local laws and regulations, and respect the privacy and legal rights of others.

### **Child's safety**

- Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous. The device includes detachable parts that may present a choking hazard. Keep away from children.
- The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

### **Accessories**

- Using an unapproved or incompatible power adapter, charger or battery may cause fire, explosion or other hazards.
- Choose only accessories approved for use with this model by the device manufacturer. The use of any other types of accessories may void the warranty, may violate local regulations and laws, and may be dangerous. Please contact your retailer for information about the availability of approved accessories in your area.

**Charger safety**

- For pluggable devices, the socket-outlet shall be installed near the devices and shall be easily accessible.
- Unplug the charger from electrical outlets and the device when not in use.
- Do not drop or cause an impact to the charger.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
- Do not touch the power cord with wet hands or pull the power cord to disconnect the charger.
- Do not touch the device or the charger with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.
- Ensure that the charger meets the requirements of Clause Q.1 in IEC62368-1/EN62368-1 and has been tested and approved according to national or local standards.
- Connect the device only to products with the USB-IF logo or with USB-IF compliance program completion.

**Battery safety**

- Do not connect battery poles with conductors, such as keys, jewelry, or other metal materials. Doing so may short-circuit the battery and cause injuries or burns.
- Keep the battery away from excessive heat and direct sunlight. Do not place it on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode if overheated.
- Do not attempt to modify or remanufacture the battery, insert foreign objects into it, or immerse or expose it to water or other liquids. Doing so may lead to fire, explosion, or other hazards.
- If the battery leaks, ensure that the electrolyte does not make direct contact with your skins or eyes. If the electrolyte touches your skins or splashes into your eyes, immediately flush with clean water and consult a doctor.
- In case of battery deformation, color change, or overheating while charging or storing, immediately stop using the device and remove the battery. Continued use may lead to battery leakage, fire, or explosion.
- Do not put batteries in fire as they may explode. Damaged batteries may also explode.
- Dispose of used batteries in accordance with local regulations. Improper battery use may lead to fire, explosion, or other hazards.
- Do not allow children or pets to bite or suck the battery. Doing so may result in damage or explosion.
- Do not smash or pierce the battery, or expose it to high external pressure. Doing so may lead to a short circuit or overheating.

- Do not drop the device or battery. If the device or battery is dropped, especially on a hard surface, it may be damaged.
- If the device standby time shortens significantly, replace the battery.
- This device contains a built-in battery. Do not attempt to replace the battery by yourself. Otherwise, the device may not run properly or the battery may get damaged. For your personal safety and to ensure that your device runs properly, you are strongly advised to contact a Honor authorized service center for a replacement.

### **Cleaning and maintenance**

- Keep the device and accessories dry. Do not attempt to dry it with an external heat source, such as a microwave oven or hair dryer.
- Do not expose your device or accessories to extreme heat or cold. These environments may interfere with proper function and may lead to fire or explosion.
- Avoid collision, which may lead to device malfunctions, overheating, fire, or explosion.
- Before you clean or maintain the device, stop using it, stop all applications, and disconnect all cables connected to it.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device or accessories. These substances may cause damage to parts or present a fire hazard. Use a clean, soft, and dry cloth to clean the device and accessories.
- Do not place magnetic stripe cards, such as credit cards and phone cards, near the device for extended periods of time. Otherwise the magnetic stripe cards may be damaged.
- Do not dismantle or remanufacture the device and its accessories. This voids the warranty and releases the manufacturer from liability for damage. In case of damage, contact a Honor authorized service center for assistance or repair.
- If the device screen is broken in a collision, immediately stop using the device. Do not touch or attempt to remove the broken parts. Promptly contact a Honor authorized service center.

### **Disposal and recycling information**



The symbol on the product, battery, literature, or packaging means that the products and batteries should be taken to separate waste collection points designated by local authorities at the end of the lifespan. This will ensure that EEE waste is recycled and treated in a manner that conserves valuable materials and protects human health and the environment.

For more information, please contact your local authorities, retailer, or household waste disposal service or visit the website <https://www.hihonor.com/>.

**Reduction of hazardous substances**

This device and its electrical accessories comply with local applicable rules on the restriction of the use of certain hazardous substances in electrical and electronic equipment, such as EU REACH regulation, RoHS and Batteries (where included) directive. For declarations of conformity about REACH and RoHS, please visit the website <https://www.hihonor.com/global/legal/certification/>.

**Restrictions in Norway**

Use of this radio equipment is not allowed in the geographical area within a radius of 20 km from the center of Ny-Ålesund, Svalbard.

# Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Use the following measures to help you protect your personal information:

- Put your device in a safe place to prevent unauthorized use.
- Set your device screen to lock and set a password or unlock pattern.
- Do not open messages or emails from strangers to prevent your device from becoming infected with a virus.
- When using your device to browse the Internet, do not visit websites that might pose a security risk to avoid your personal information from being stolen.
- If you use services such as the portable Wi-Fi hotspot or Bluetooth, set passwords for these services to prevent unauthorized access. Turn these services off when they are not in use.
- Install device security software and regularly scan for viruses.
- Using unauthorized third-party software to update your device may damage your device or put your personal information at risk. It is recommended that you update through your device's online update feature or download official update packages for your device model from Honor.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Honor or authorized third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Some third-party application providers may collect detection and diagnostic information on your device to improve their products and services.

# Legal Notice

**Copyright © Honor Device Co., Ltd. 2023. All rights reserved.**

The product described in this manual may include copyrighted software of Honor and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

## **Trademarks and Permissions**

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Honor Device Co., Ltd. is under license.

Wi-Fi<sup>®</sup>, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are trademarks of Wi-Fi Alliance.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Microsoft and Windows are trademarks of the Microsoft group of companies.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

## **Notice**

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Honor reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

## **Third-Party Software Statement**

Honor does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Honor will not provide any warranty of any kind for third party software and applications. Neither will Honor provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Honor does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Honor. To the greatest extent permitted by applicable law, it is explicitly stated that Honor shall not compensate or be liable for services provided by

third-party service providers, or the interruption or termination of third-party contents or services.

Honor shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

## **DISCLAIMER**

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HONOR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORESEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HONOR ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

## **Import and Export Regulations**

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

## **Privacy Policy**

To better understand how we protect your personal information, please see the privacy policy at <https://www.hihonor.com/privacy-policy/worldwide/>.

## **For More Help**

Visit <https://www.hihonor.com/global/support/> for the most up-to-date contact information for your country or region.

ALL PICTURES AND ILLUSTRATIONS IN THIS GUIDE, INCLUDING BUT NOT LIMITED TO THE DEVICE COLOR, SIZE, AND DISPLAY CONTENT, ARE FOR YOUR REFERENCE ONLY. THE



ACTUAL DEVICE MAY VARY. NOTHING IN THIS GUIDE CONSTITUTES A WARRANTY OF ANY KIND, EXPRESS OR IMPLIED.