



INSTRUCTIONAL GUIDE

SLIM W1 WIRED BACKLIT KEYBOARD

- 1 Plug in Slim W1 Wired Backlit Keyboard into a USB-C or Thunderbolt 3 port.

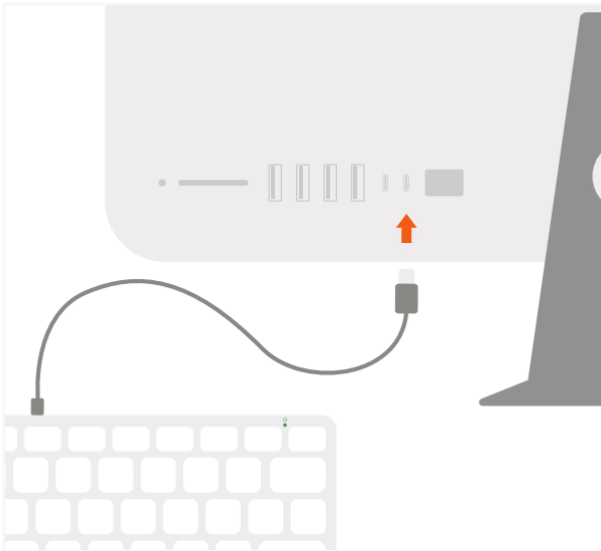

- 2 On MacOS, "Keyboard Setup Assistant" **may** appear when first connecting the keyboard. Follow on-screen instructions to identify keyboard before first use.

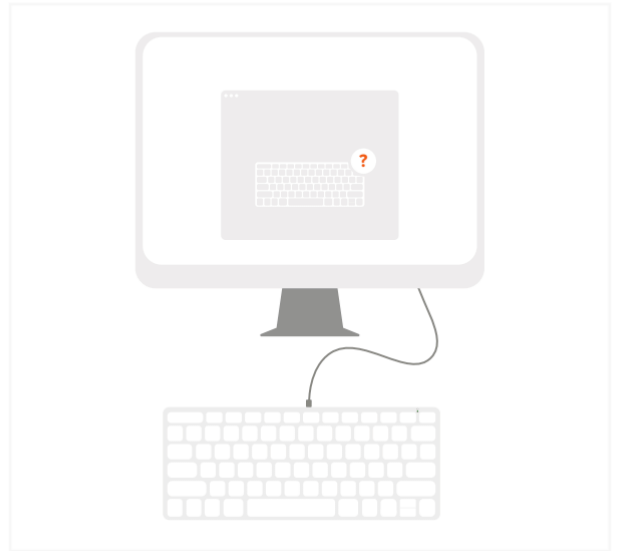

- 3 Use MacOS shortcut keys for convenient media control. All shortcut keys may not be supported on Windows OS. Use combination "Fn + Esc" to enable the Fn Lock



- 4 Compatible with Mac & iPad devices with USB-C ports. To enable support with USB-A devices, please use with our Type-A to Type-C Adapter (sold separately).

